

ANUBIS FIRMWARE UPDATE PROCEDURE

PREREQUISITES

- ANEMAN v1.1.7 and above. Download from <https://www.merging.com/anubis/download>
- An internet connection to download the latest Firmware or Maintenance Mode
- Connecting the ethernet interface of the Anubis to a Mac or PC system for the update procedure

PROCEDURE

1. Install ANEMAN

2. Download the latest Anubis Firmware from <https://www.merging.com/anubis/download>

Note: Some firmware will first require a Maintenance Mode update that is based on the same procedure

3. Connect your Anubis network port to the system where you have downloaded the latest firmware

4. Launching ANEMAN will discover your Anubis within seconds.

5. Once ANEMAN discovers Anubis perform a Mouse + Right Click and select Web Services> Maintenance




6. This will open a browser page from which you will be able to select the firmware file




7. Use the "Select File" button in order to then select your firmware


8. This will open the explorer form which you can load the Firmware

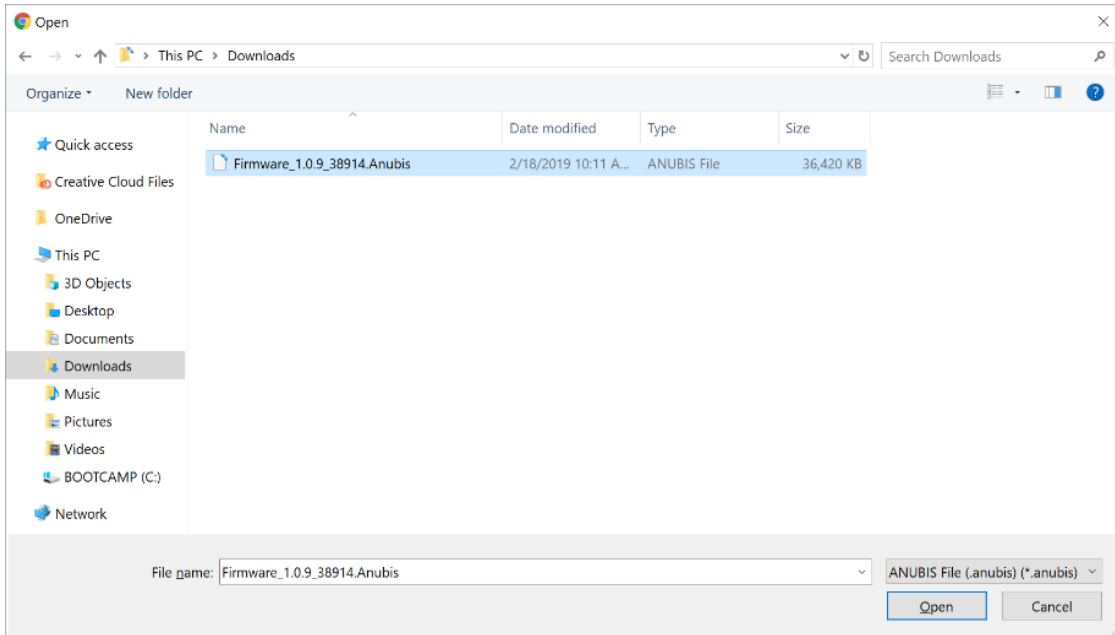


9. Once the firmware is selected press the Update button

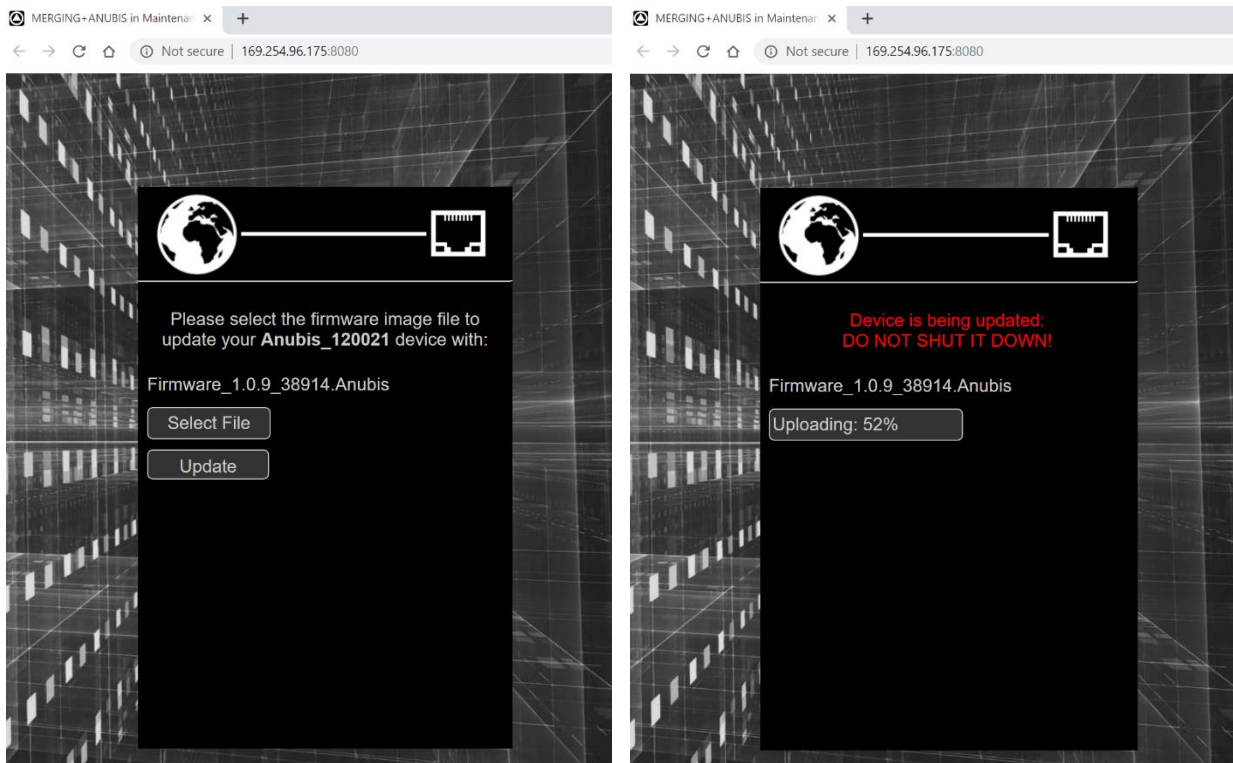

10. Wait for the upload and update to complete. Notice that your Anubis TFT will also display the progression of the update.

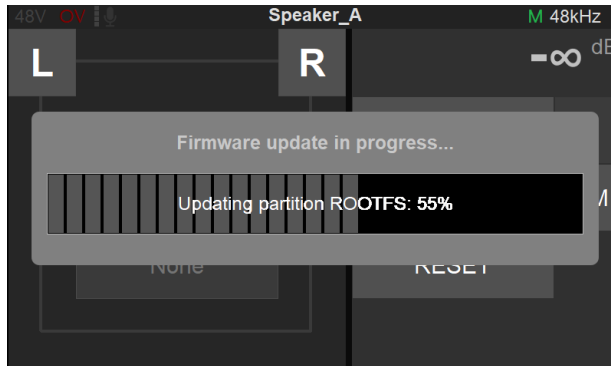

11. Once the Firmware update is completed please reboot your Anubis. From either the browser or the ANUBIS TFT, by selecting "Reboot Device"

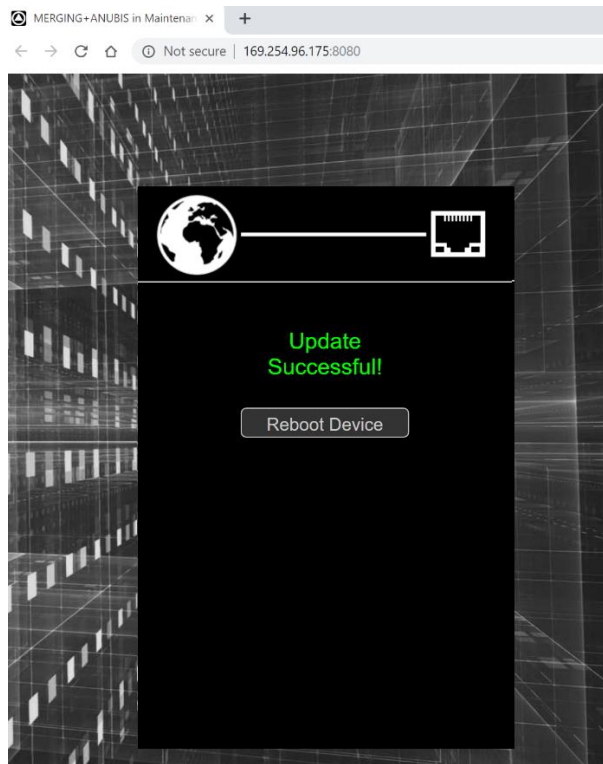

12. You should now be on the latest Firmware. You can verify the Firmware version of your Anubis opening the (Long press Home button) under Settings>Info

Note: It is also possible to update the Anubis firmware by starting Anubis in Maintenance mode (from its settings menu) and then using MT Discovery in order to perform the Firmware update or Maintenance Mode update.

For more details contact anubis@merging.com